



24

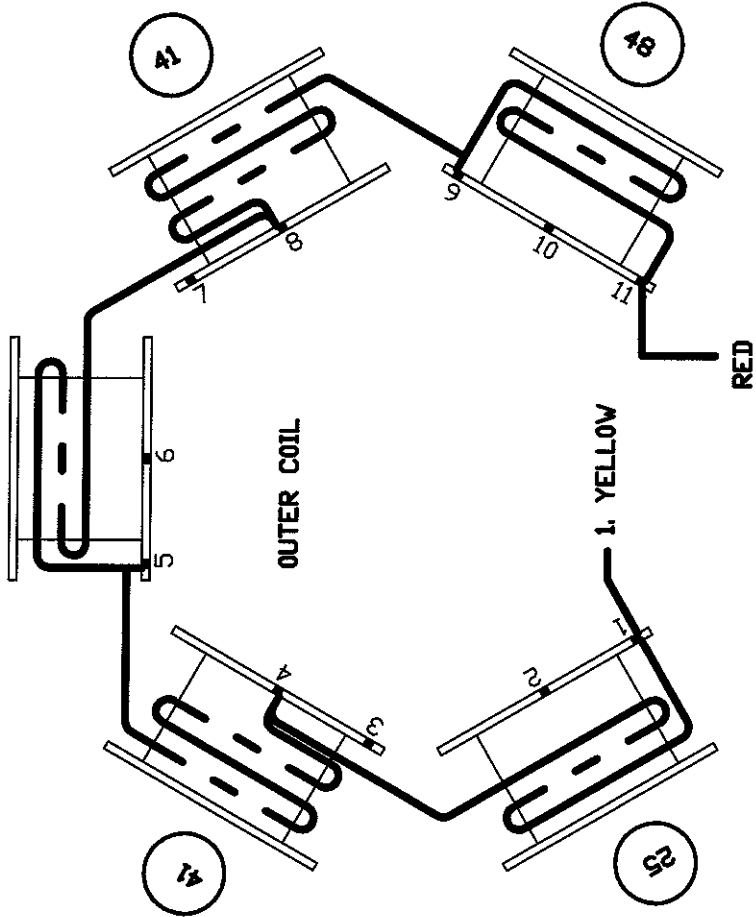

24

NUMBER OF WINDINGS

24

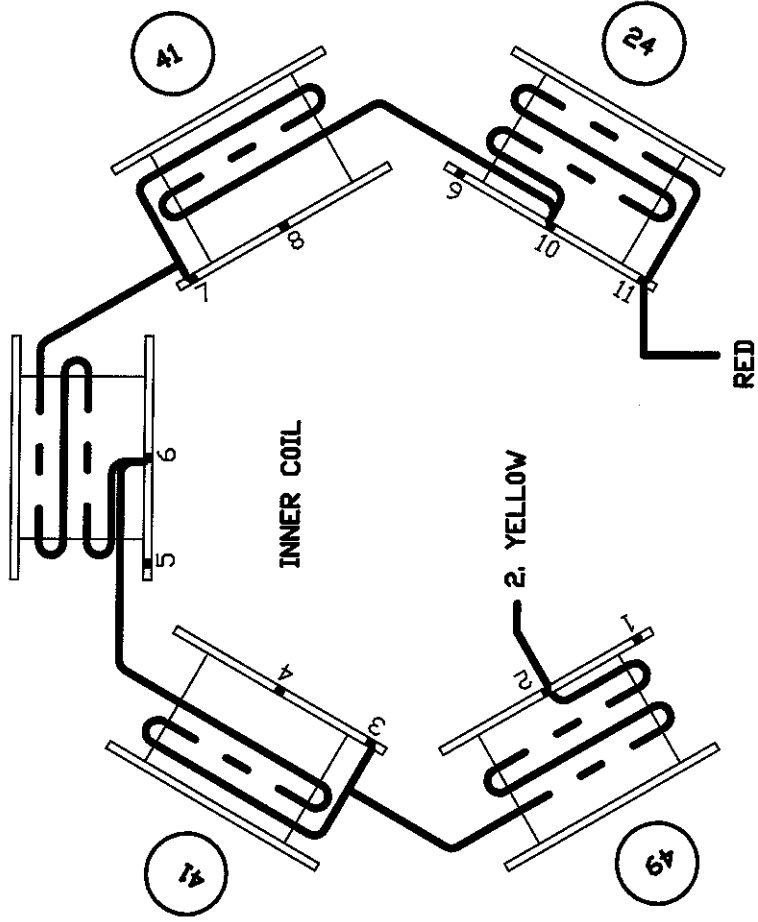

USE 0,8mm PU-INSULATED COPPERWIRE (RS-COMPONENTS NUMBER 357-772)

NO NEED FOR BAKING OR VARNISH. THE INSULATION IS VERY STRONG, CLEAN SOLDERING POINTS WITH A KNIFE

BE CAREFULL WHEN REMOVING OLD VARNISH FROM PLASTICSLEEVE, THE CORNERS ARE VERY VULNARABLE. EVENTUALY PROTECT THE THE CORNERS WITH ONE OR TWO WINDS OF MASKINGTAPE BEFORE THE INNER COIL TO PREVENT EARTHING, THE IRONCORE IS VERY SHARP

THE TWO COILS CAN BE SEPERATED BY USE OF MASKINGTAPE, THIS MAKES THE JOB EASIER